

Using the Hydraulic Breaker

1. Wear protective equipment including ear defenders and safety boots.
 2. Do not operate the breaker until the tool is on the work surface. Do not operate the breaker if the tool has no load.
 3. Watch out for signs that vibration may be affecting hands. If fingers start to tingle or feel numb, take a short break from using the breaker. Exercise fingers to encourage blood circulation.
 4. To help prevent vibration affecting hands, operate the machine for shorter periods. Keep hands warm – wearing gloves may help do this.
 5. Always start each operation with the breaker at right angles to the work surface to prevent the tool skating across the surface to be broken.
 6. Do not use the breaker as a lever to prise open the work area.
 7. Do not try to lever free a tool jammed in the work surface. Instead release the tool from the breaker and insert another one. Use this second tool to break up the ground and free the first tool.
 8. Keep the hydraulic hoses clear of the work area.
 9. Do not stretch the hoses as the work area expands, move the power pack.
 10. Do not drag the power pack by pulling on the hoses.
 11. If a hose appears to be damaged or is leaking, stop work, stop the engine and release the pressure by moving the flow control lever to minimum and squeezing the trigger on the breaker.
 12. On solid concrete areas use a point. Start near the edges and work to a pattern.
 13. Stop the engine before leaving the equipment unattended.
 14. If the equipment appears to be faulty or does not work properly do not attempt to repair it. Contact the hire company.

Keep this leaflet safe as it may be required for reference at a future date.



HAE
HIRE ASSOCIATION EUROPE

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solihull B37 7YE

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4100
Email: mail@hae.org.uk
website: www.hae.org.uk

Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

Any unauthorised reproduction - manual or electronic - is strictly prohibited

11. Ensure you understand all of the controls. Before starting the machine, show how to stop it.

1. Check the engine and machine controls are set correctly and the power pack is on a level surface.

2. Ensure you hold the power pack firmly so it will not move when the starter is pulled. Pull the starter handle slowly until you can feel the starter has engaged with the engine, then pull it quickly and strongly. Don't pull it out too far or it may break.

3. Pull the cord correctly. Engage the cord into the tool bit so it does not pull out too far or it may break.

4. Engage the cord back into the breaker. The breaker can only use the tool bits specifically for it. Do not use any other bits. The tool bit should be clean and straight before inserting it into the breaker.

5. Do not use the system to unclog drains, hoses while the system is pressurised. Shut the engine off and release the pressure by moving the low control lever to minimum and squeezing the trigger on the breaker.

6. Do not touch the discnnected hose to minimise and squeeze the trigger to unclog pipes. If the system is pressurised, do not use before inserting it into the breaker.

7. Hydraulic oil is dangerous, keep it away from eyes and mouth, and wash it off skin immediately.

8. The hydraulic system has been checked and double oil level can be checked by looking at the sight glass. If the oil level is low contact the hire company.

9. Change clothes immediately if hydraulic oil is spilled on them.

10. The hydraulic oil is pressurised to over 1200 psi (80 bar). Do not attempt any repair or adjustment.

11. Do not try to stop a leak by pressing a thumb over it. Hydraulic oil under pressure results. It is also very hot and can cause serious burns. Use a funnel and clean petrol when refilling. Clean the filter cap and the area around the work area.

12. If possible move the machine away from the work area. Stop the engine and let it cool down.

13. No smoking.

14. RELEASING
Do not touch the discnnected hose to unclog pipes. If the system is pressurised, do not use before inserting it into the breaker.

15. HYDRAULIC SAFETY
Recalls correctly.

1. Hydraulic oil is dangerous, keep it away from eyes and mouth, and wash it off skin immediately.

2. Ensure you hold the power pack firmly so it will not move when the starter is pulled. Pull the cord firmly so it will not move when the starter is pulled.

3. Pull the cord slowly until you can feel the starter has engaged with the engine, then pull it quickly and strongly. Don't pull it out too far or it may break.

4. Engage the cord correctly. Engage the cord into the tool bit so it does not pull out too far or it may break.

5. Do not use the system to unclog drains, hoses while the system is pressurised. Shut the engine off and release the pressure by moving the low control lever to minimum and squeezing the trigger on the breaker.

6. Do not touch the discnnected hose to unclog pipes. If the system is pressurised, do not use before inserting it into the breaker.

7. Hydraulic oil is dangerous, keep it away from eyes and mouth, and wash it off skin immediately.

8. The hydraulic system has been checked and double oil level can be checked by looking at the sight glass. If the oil level is low contact the hire company.

9. Change clothes immediately if hydraulic oil is spilled on them.

10. The hydraulic oil is pressurised to over 1200 psi (80 bar). Do not attempt any repair or adjustment.

11. Do not try to stop a leak by pressing a thumb over it. Hydraulic oil under pressure results. It is also very hot and can cause serious burns. Use a funnel and clean petrol when refilling. Clean the filter cap and the area around the work area.

12. If possible move the machine away from the work area. Stop the engine and let it cool down.

13. No smoking.

14. RELEASING
Do not touch the discnnected hose to unclog pipes. If the system is pressurised, do not use before inserting it into the breaker.

15. ACCESSORIES
Switch off the power pack before changing the tool bit.

16. Switch off the power pack before cleaning the tool bit.

17. The breaker can only use the tool bits specifically for it. Do not use any other bits. The tool bit should be clean and straight before inserting it into the breaker.

18. The tool bit should be cleaned before use. Do not use any other bits.

19. Do not use the system to unclog drains, hoses while the system is pressurised. Shut the engine off and release the pressure by moving the low control lever to minimum and squeezing the trigger on the breaker.

20. Do not touch the discnnected hose to unclog pipes. If the system is pressurised, do not use before inserting it into the breaker.

21. Ensure you understand all of the controls. Before starting the machine, show how to stop it.



Before Starting Work...

HYDRAULIC BREAKER

- www.hse.gov.uk/electricity/information/construction.htm